


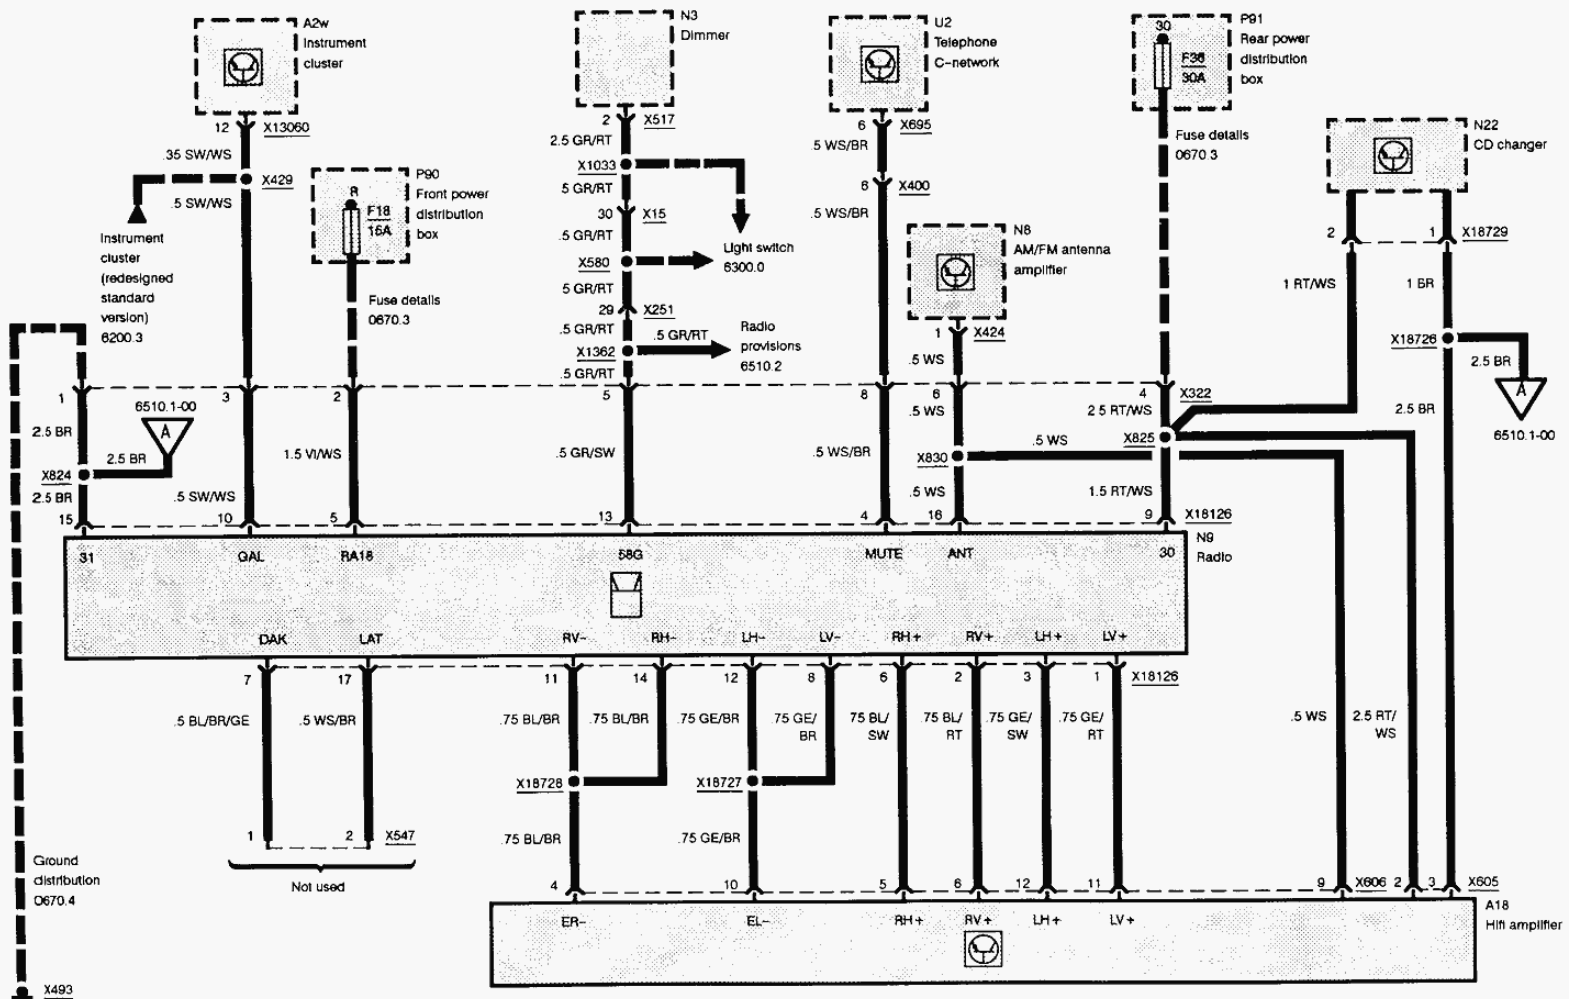

Radio/HiFi


One component





Radio/HiFi


Two components

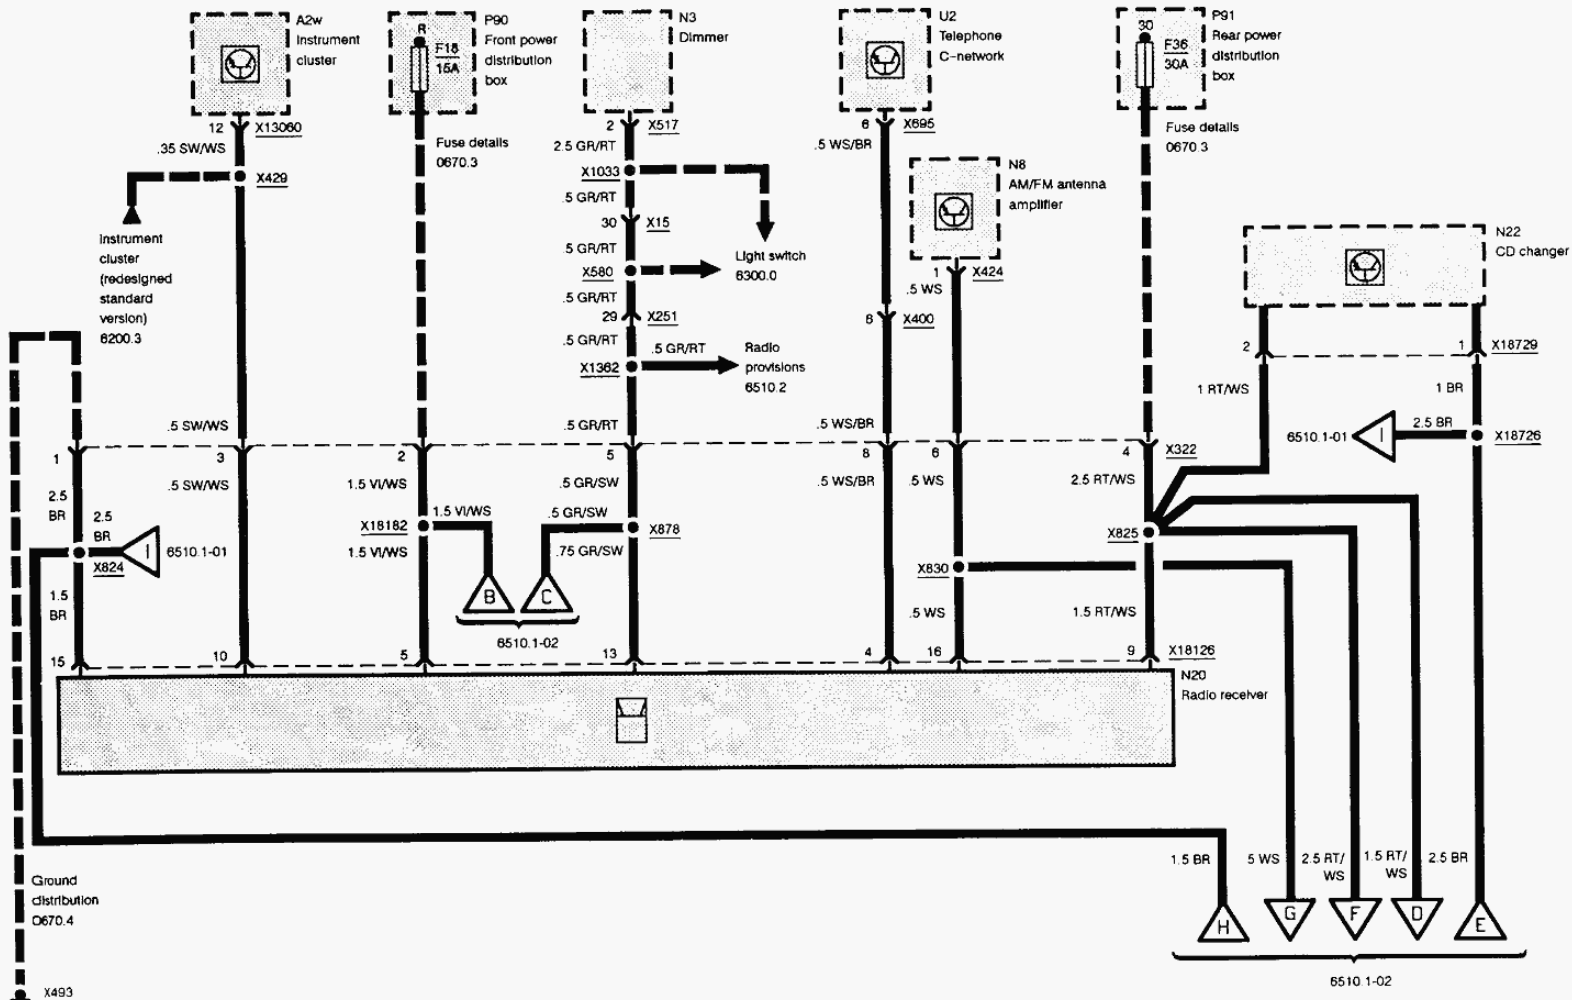



Radio/HiFi


Two components

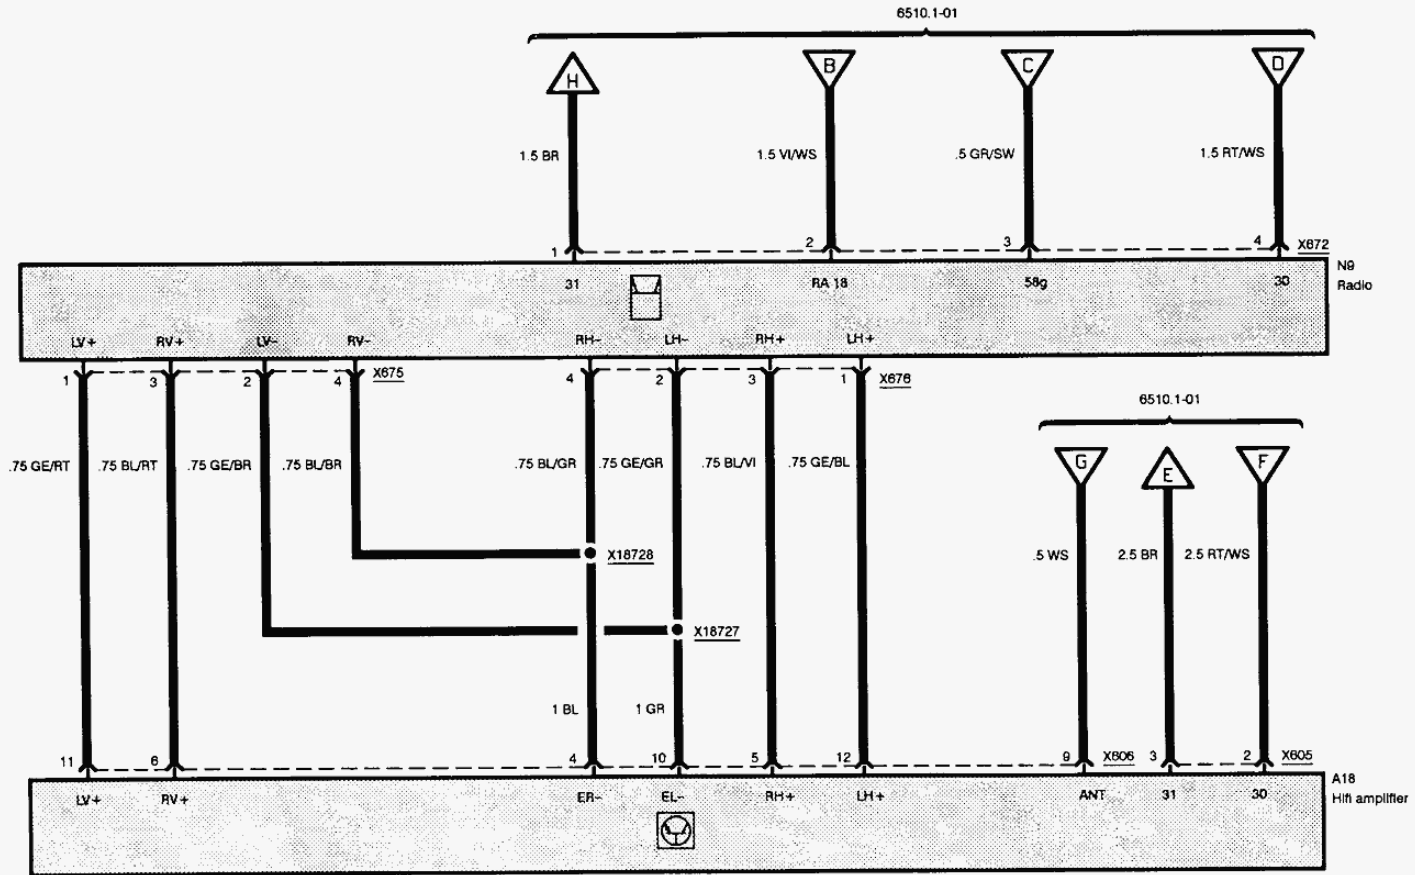




Radio/HiFi

Speaker activation (front speaker)

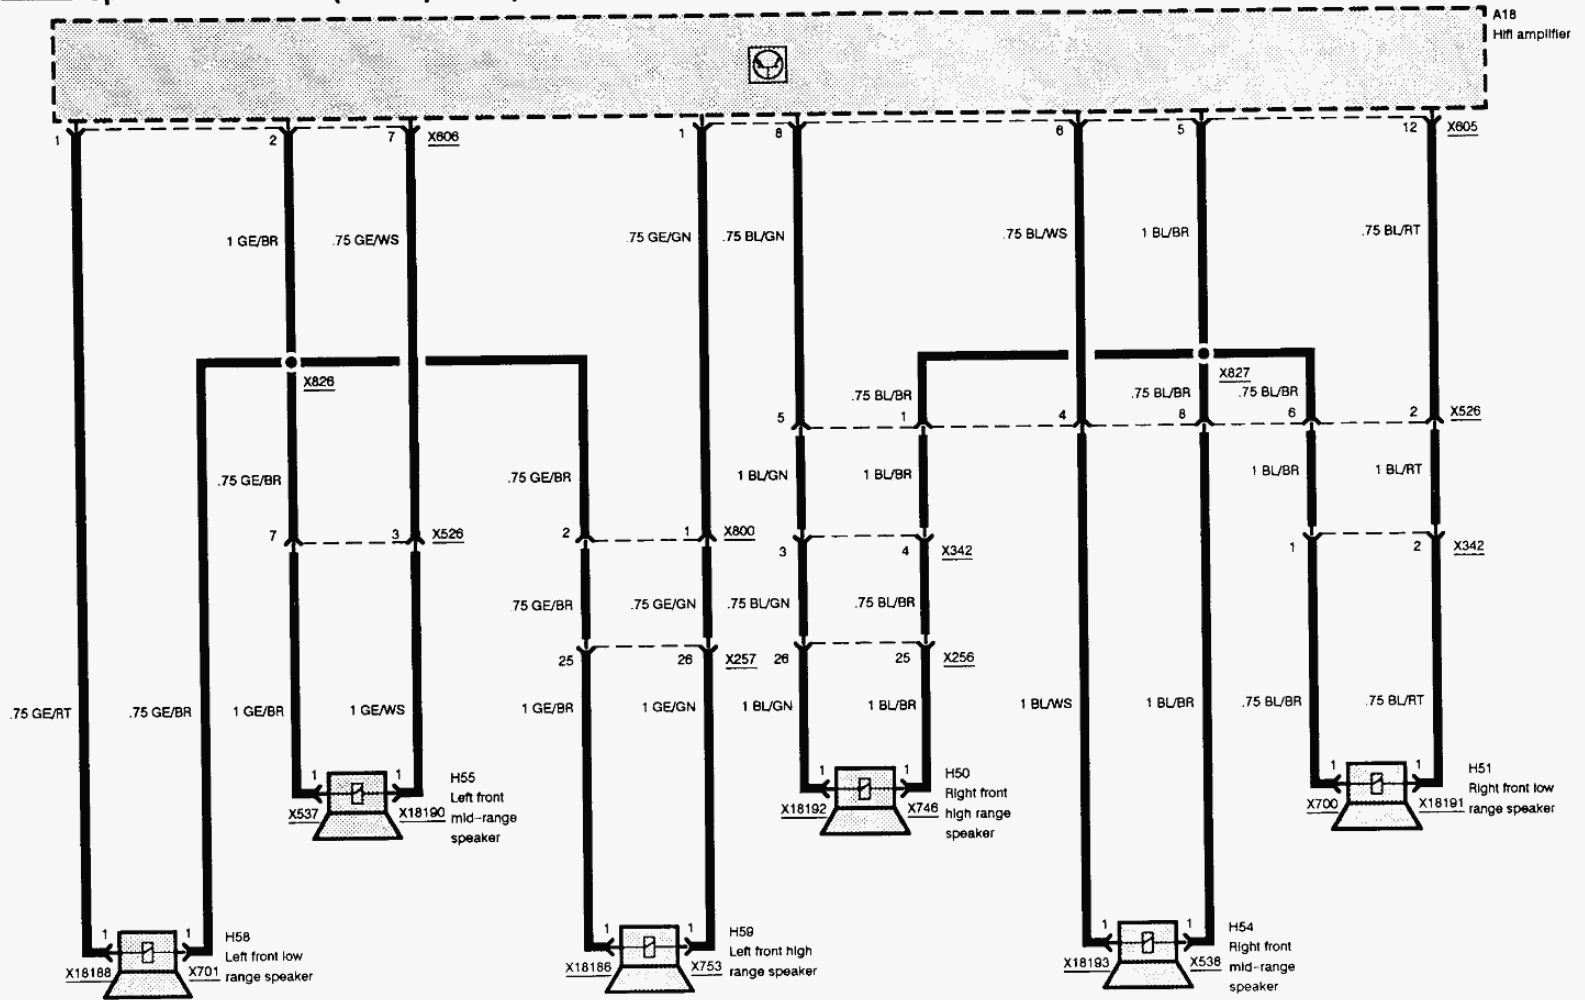

Speaker activation (rear speaker)

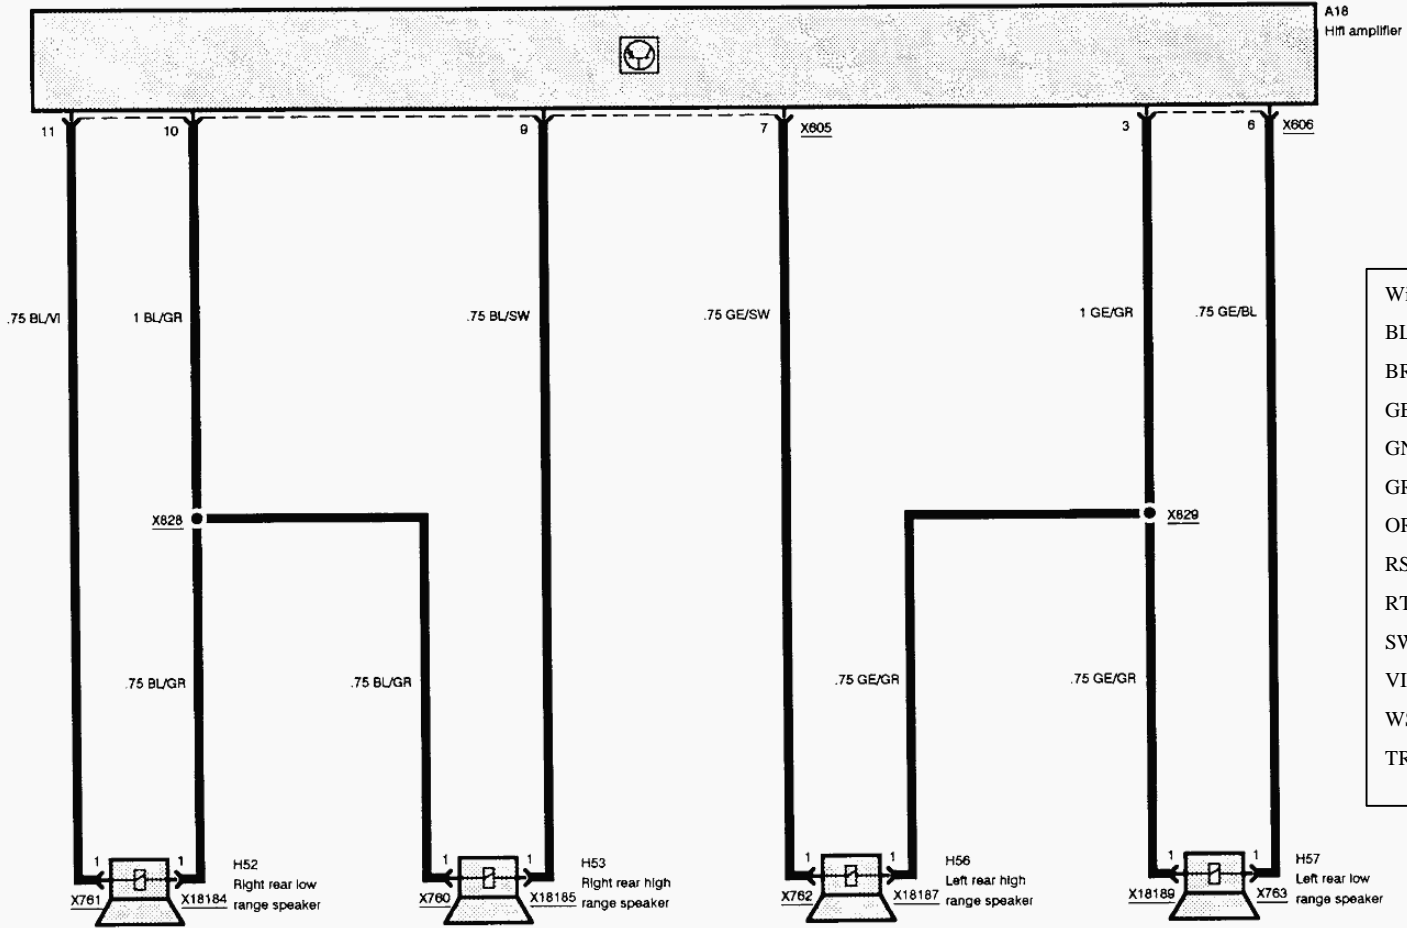

Wire colour	
BL	Blue
BR	Brown
GE	Yellow
GN	Green
GR	Grey
OR	Orange
RS	Pink
RT	Red
SW	Black
VI	Violet
WS	White
TR	Transparent